

Tacho Converter

Converts ECU tacho Signal to drive older coil-driven tachos.

Connections:

- 1 12v
- 2 Input from ECU Tacho
- 3 Output to coil driven tacho
- 4 Power Ground



4 3 2 1